

# Smart for Tern GSD. Manual.

Lockride Smart for Tern is quick and easy to install. Feel free to contact [info@lockride.nl](mailto:info@lockride.nl) if you have any questions.

Required tools: **Torx T15 & Inbus 4.**

## Step 1. Remove the Bosch lock. *(images are not on accurate model but show same way of dismantling)*



**1.1** Remove the battery from the bicycle.



**1.2** Unscrew the lock cap at the bottom with a Torx screwdriver.



**1.3** Unclip the lock cap by gently bending it open to the sides.



**1.4** Unscrew the two Inbus screws and remove the Bosch lock.


## Step 2. Install the Lockride.




**2.1** Place the bracket over the ridge. Put the Bosch lock back in place, but do not fully tighten the screws yet. Place the battery back in the bottom docking and the Bosch lock. Make sure that the Bosch lock clicks properly; if not, you may need to move the lock slightly for proper placement.



**2.2** When the battery clicks properly, slide the pin through the bracket. Because the Bosch lock is not yet fully tightened, you can still position the Lockride so that it does not touch the battery. If everything is correct, remove the battery from the bicycle and tighten the Bosch lock.

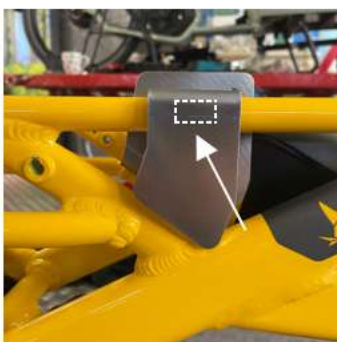

**2.3** Now replace the battery. Stick the supplied piece of foam to the inside of the pin where it contacts the frame. Then slide the pin through the bracket.

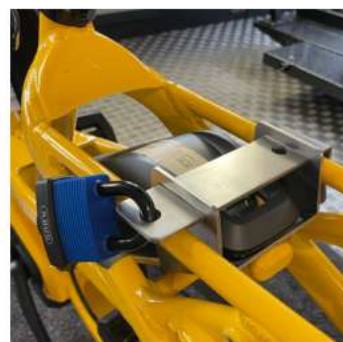

**2.4** Lock the Lockride with the supplied ABUS padlock. Voilà. 🍷